


CAS Technical Bulletin

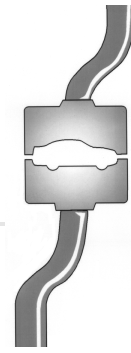


PRODUCT: Honda GNA
TOPIC: Update to current software
DATE: 3/29/2008

SUBJECT / ISSUE: This is the procedure for performing a Honda GNA software update.

1. Quit all other running programs.
2. Turn off any screen savers.
3. Insert CD into drive. CD should auto run. Click on [Next] at first screen. The setup files will be downloaded onto your 'C' drive.
- 3a. If the CD does not auto run, go to your 'Desktop' double click on [My Computer], right click on your CD drive (usually D) and click [Open], double click on [Setup.exe].
4. After the files finish downloading click [Finish].
5. To install the program, from your Desktop double click ['My Computer']. Double click on ['C Drive].
6. You should have a folder called [Horwa05ds]. Double click on the folder to open it.
7. Double click on the [PC] folder.
8. Double click on the [Installation] folder.
9. Double click on the [Setup.exe] file to install the program to your PC.
10. Follow any on-screen instructions regarding selection, disconnection or connection of the Interface device. Note: Your interface device is the 'GNA 600'.
11. Click [Finish] when done. The Honda Diagnostic Software program is now updated.

-----SPECIAL NOTE-----

- ✓ To start the Honda Reflash program you can go to: Start ⇒ Programs ⇒ CM update (ECU Rewrite). This will allow you to access the Honda Reflash program. Acura reflash is 'Acura Link Update'.
- ✓ To put an icon on your desk top go to: Start ⇒ Programs ⇒ CM Update. Right click on [CM Update /ECU Rewrite] and drag to the desktop. Click [Copy Here]. Do the same for 'Acura Link Update'. You can rename them as 'Honda Reflash' and 'Acura Reflash' if you wish by right clicking on icon and clicking on [Rename].

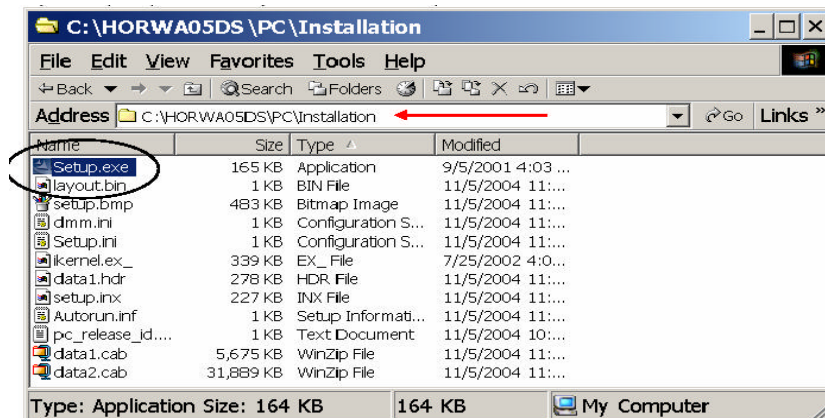

END OF DOCUMENT